


136cc FUN KART OWNERS MANUAL SUPPLEMENT

Clutch Lubrication and Cleaning

- The clutch may perform poorly if not lubricated properly within each 25 hour period. Premature failure of clutch components may also occur. Before reaching 25 hours of operation, remove the clutch from the engine output shaft and disassemble the clutch components.
- Using brake or carburetor cleaner and a soft brush, clean all the components of the clutch assembly. Ensure there are no rough surfaces.
- Apply a dry graphite lube to the entire outer surface of the clutch hub and the inner surfaces of the clutch's outer stationary sheave.
- Allow the lube to completely dry. Reassemble the clutch assembly and install onto the engine output shaft.

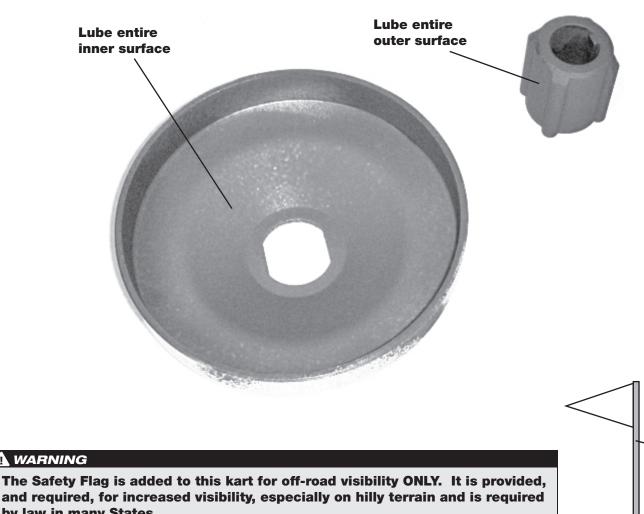

MARNING

and required, for increased visibility, especially on hilly terrain and is required by law in many States.

Safety Flag Installation

- Insert the safety flag (13) into the head of the hollow nut (10).
- Insert the bolt (5) through the bracket on the frame.
- Place nut (6) on bolt (5) and tighten.
- Insert flag (13) into bolt (5) and tighten nut (10).

