Operator's Manual SUPPLEMENT Model No. 584B-0

WARNING:

Read Engine
Owner's Manual,
Vehicle Operator's
Manual, and
Supplement
Carefully Before
Operating Vehicle.

Parts List




4404 Engle Ridge Drive, Fort Wayne, IN 46804 ph (260) 432-1596 fx (260) 432-7870

THIS VEHICLE IS FOR OFF-ROAD USE ONLY

BEFORE OPERATING THIS VEHICLE, THE OWNER AND/OR OPERATOR MUST UNDERSTAND THE VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON STREETS, HIGHWAYS, OR THOROUGHFARES AND HAVE READ AND HAVE AN UNDERSTANDING OF ALL THE INSTRUCTIONS FOR SAFE ASSEMBLY AND OPERATION AS WELL AS THE INSTRUCTIONS GOVERNING THE ENGINE AND OTHER PORTIONS OF THE VEHICLE.

01/16/02 9257R3

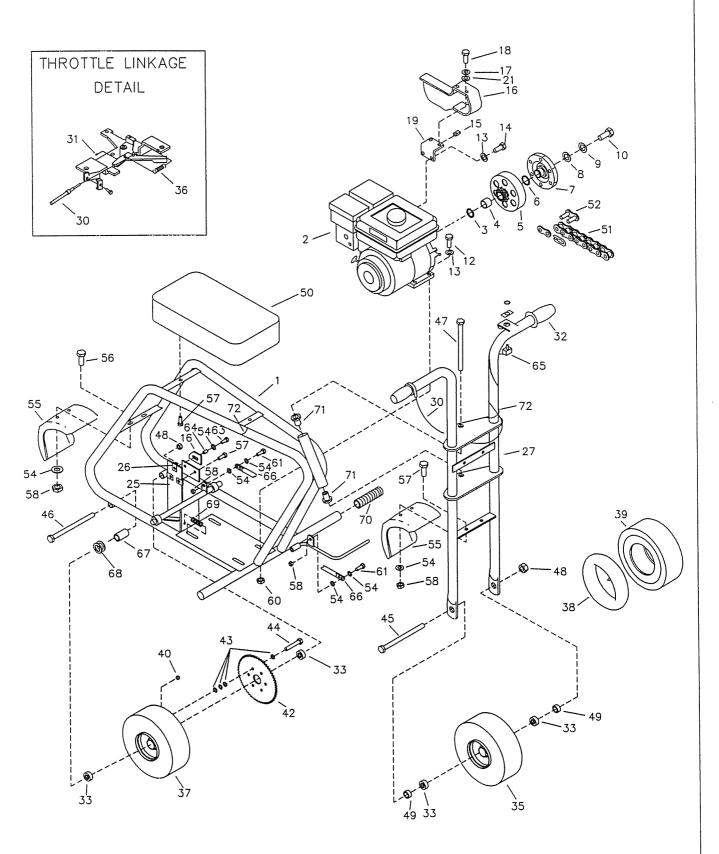

PARTS LIST FOR MODEL 584B-0

REF	PART		REF	PART	
NO.	NO.	<u>DESCRIPTION</u>	NO.	NO.	<u>DESCRIPTION</u>
1	12315-5	Frame	37	10379	WH ASM 5IN STL DR WH 4.10 X
2	12245	Engine 4HP Rear Pull Throttle			3.50 STD
		3200RPM	38	1753	Tube, 5"
ASM	4335	Clutch, 35 Chain x 12 Tooth (Inc.	39	2246	Tire, 4.10 - 3.50 x 5"
		#3 7)	40	1189	Nut 5/16-18 Hex TL Z
3	3141	Snap Ring	41		
4	3143	Bushing, Clutch	42	8007-2	Sprocket, 35 Chain x 60 Teeth
5	4491	Drum w/ Sprocket (inc. REF 4)	43	9060	Washer 5/16 Type A Plain Sae N Z
6	3146	Washer, Fiber	44	9176	Bolt 5/16-18 X 1.000 HHCS G5 Z
7	4496	Clutch Rotor	45	9157	Bolt, 5/8-11 x 6.5"
8	8186	Washer .391ID X 1.2500D X .12	46	2772	Bolt, 5/8-11 x 9.5"
9	1130	Washer 3/8 SL Z	47	1138	Bolt, 5/8-11 x 7.0"
10	9073	Bolt, 3/8-24 x 3/4"	48	1046	Nut, 5/8-11 Top Lock
11			49	4266-16	Spacer, 5/8ID-11GA x 1-1/8"
12	9186	Bolt, 5/16-18 x 1-1/2"	50	8594	Seat
13	9030	Washer, 5/16" Interlock	51	2280	Chain, #35 x 116 Pitch (inc.#52)
14	9101	Bolt, 5/16-24 x 1/2"	52	1269	Masterlink, #35 Chain
15	5135	Nut, Clip	53		
16	6495R	Chainguard, (inc. # 20-24,73)	54	1854	Washer, #14 Flat
17	6039	Washer, #10 Internal Lock	55	2018-2	Fender
18	6046	Bolt NBR 10-24 X .500 HHMS Z	56	5839	Bolt, 1/4-20 x 3/4" Whiz Flange
19	6480-2	Bracket, Chain Guard	57	9006	Bolt, 1/4-20 x 1/2" Whiz Flange
20			58	9057	Nut, 1/4-20 Lock
21	9104	Washer NBR 10 Flat STD Z	59		
22	No. 700 No. 100		60	1263	Nut, 5/16-18 Whiz Flange
23		As an as an air an	61	1846	Bolt, 1/4-20 x 3/4"
24		***************************************	62		T 11 111 00 510"
25	6479-2	Cover Lower 580/584	63	1845	Bolt, 1/4-20 x 5/8"
26	2449	Nut, Tinnerman	64	9949	Bushing, 1/4" ID x 1/4" Long
27	6352-5	Handle Bar	65	12305	Stopswitch ASM W/Nut & Plate
ASM	11160	Grip Assembly	66	6336-2	Brake Rod
28			67	12093	Bushing 5/8 ID X 1/2 IN L Z
29		45 14 45 45 45 45 47 47 47 48 46 47 47 48 48 48 49 49 48 48	68	1119	Spacer .625ID 1.062OD .125THK Z
30	11525	Throttle Cable 56.25IN	69	4365	Spring
31	12347	Swivel Screw For Robin	70	2274	Grip, Foot
32	11158	Grip, Dummy	71	9507	Bushing
ASM	10376	WH ASM 5IN STL WH 4.10 X	72 70	1019	Ty-Wrap
		3.50 STD	73	40060	Engine Owner's Manual
ASM	12104	WH ASM 5 IN STL DR WH	NI	12268	Engine Owner's Manual
33	5090	Bearing 5/8 ID 1-3/8 OD Snap	NI	4198	Mini-Bike Operator's Manual
		Ring	NI	11330	Decal Sheet – Warnings (LARGE)
34		100 A CINI OTI 100 A 40 M		A C R # A	ssombly
35	10376	WH ASM 5IN STL WH 4.10 X		ASM = A NI = Not I	
	10010	3.50 STD		MI - MOLI	แนวแลเซน
36	12348	Return Spring			

ASSEMBLY PROCEDURES

GENERAL

- 1. Carefully unpack all parts from shipping containers.
- 2. Locate and unpack the Mini-Bike Operator's Manual.
- 3. Complete the information block on the back page of the Operator's Manual.
- 4. Identify and verify all parts in the Parts Pack.
- 5. Reference the Exploded View for correct assembly of all parts.

FRONT WHEEL ASSEMBLY

NOTE: For easier assembly, complete step 2 listed under Miscellaneous Assembly.

1. Insert one Bolt (REF 45) through the Fork Assembly lower Axle mounting hole. Place one Spacer (REF 49) on the Bolt. Insert the Bolt into the Front Wheel Assembly. HINT: If the bolt will not slide into the Front Wheel Assembly, insert a long screw driver, or similar object, from the other side of the Axle. Use the screw driver to move the internal spanner so that it does not interfere with the Bolt. Place the remaining Spacer on the Bolt. Insert the Bolt through the other hole in the Fork Assembly and secure with one Nut (REF 48). Tighten until all side play is removed from the Front Wheel Assembly. Ensure that the Wheel rotates freely.

THROTTLE ASSEMBLY

The Twist Grip Assembly must be mounted on the Handlebar before the Fork Assembly is mounted to the Frame. The length of the Throttle Cable will not allow assembly in reverse order.

- 1. Remove the rear-most Ty-Wrap holding the Twist Grip (REF 28) and Stop Switch (REF 65) secure during shipping. Discard the Ty-Wrap. Also remove the Ty-Wrap holding the two Handlebar Grips together. Discard the Ty-Wrap. Slide the Dummy Grip (REF 32) onto the Left Handlebar.
- 2. Separate the Throttle Cable and Stop Switch Wire. Lay the Stop Switch to the Left side of the Frame. Rout the Throttle Cable (REF 29), as shown in Figure

- 1, along the Top, Right side of the Frame, and between the Upper Crown Plate and Front Plate Mounting Bracket.
- 3. Loosen the two Screws on the Twist Grip. Slide the Twist Grip all the way onto the Right Handlebar. Do not tighten the Screws at this time.

FORK ASSEMBLY

- 1. Place one Bushing (REF 71) in each end of the Frame Pivot Tube. HINT: The Bushings may be held in place with a small strip of tape. Do not place tape over the hole.
- 2. To mount the Fork Assembly to the Frame, align the Fork Pivot Holes with the Frame Pivot Tube and insert the Bolt (REF 47) through the Fork Holes and Bushings. Ensure the Throttle Cable is to the right of the Pivot Tube, see Figure 1. It may be necessary to tap the head of the Bolt with a hammer to seat it in position against the Nut welded to the bottom side of the Lower Fork Plate. Tighten the Bolt until there is no play between the Fork and the Pivot Tube but will still allow the Fork to rotate freely.



WARNING: The Fork must be able to rotate freely for safe operation.

THROTTLE ASSEMBLY CONTINUED

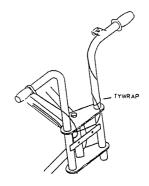


Figure 1: Routing Diagram

- 4. Slide the Twist Grip all the way onto the Right Handlebar, then back off approximately 1/4". This will ensure that the Twist Grip will not bottom out on the end of the Handlebar.
- 5. Rotate the Twist Grip so that the Throttle Cable points downward and slightly ahead. The Throttle Cable and Housing should form a smooth curve from the Twist Grip to the upper Frame tube, see Figure 1. Tighten the two Screws in the Twist Grip securely.



CAUTION: Rotate the Twist counterclockwise to the full open position and release it to insure that it snaps back to the idle position. The Twist Grip must rotate easily in both directions to ensure safe operation. If the Twist Grip does not rotate easily in both directions, repeat the assembly procedure.

STOP SWITCH ASSEMBLY

- 1. Rout the Stop Switch Wire (REF 65), as shown in Figure 1, along the Top, Right side of the Frame, under the Top Crown Plate, and between the Pivot Tube and Right Fork Tube. Wrap the Wire around the Left Handlebar one time. Remove the Nut and On/Off Plate from the Stop Switch. Pass the Stop Switch up through the mounting hole on the Handlebar. Replace the On/Off Plate and the Nut. Work any slack in the Stop Switch Wire towards the Pivot Tube and apply one Ty-Wrap (REF 72) as shown in Figure 1. Securely tighten the Nut.
- 2. Turn the Handlebar through its full range of movement to ensure that neither the Throttle Cable Housing nor the Stop Switch Wires bind, stretch, or are pinched in the process. Correct any problems.

SEAT ASSEMBLY

1. Mount the Seat to the Frame using two Bolts (REF 57). Fasten securely. Do not over tighten.

MISCELLANEOUS ASSEMBLY

- 1. Mount the Face Plate to the Forks using the following hardware found in the hardware pack: 2 Bolts (1/4-20 x 1/2"), two Washers (#14, Flat), and two Nuts (1/4-20 Lock). The Washers should be positioned between the Bolts and the Face Plate. Tighten securely.
- 2. Mount the Front Fender (REF 55) to the Forks using two Bolts (REF 57), two Washers (REF 54), and two Nuts (REF 58). The Washers should be positioned between the Nut and the Fender. Tighten securely.
- 3. Slide Foot Grips (REF 70) onto the Frame.

PRE-RIDE MAINTENANCE

1. Carefully and completely read the Engine Owner's Manual. Fill the Engine Crankcase with oil as described in the Engine Owner's Manual.



CAUTION: The Engine is shipped without oil in the crankcase.

- 2. Carefully and completely read the Mini-Bike Operator's Manual. Follow the Pre-Ride Inspection steps. Fill the Fuel Tank with Fuel and lubricate appropriate points as described in the Mini-Bike Operator's Manual.
- 3. If there are any problems or discrepancies, contact your Dealer or the Customer Service Department at Manco Products, Inc.

NOTES